


PLAN

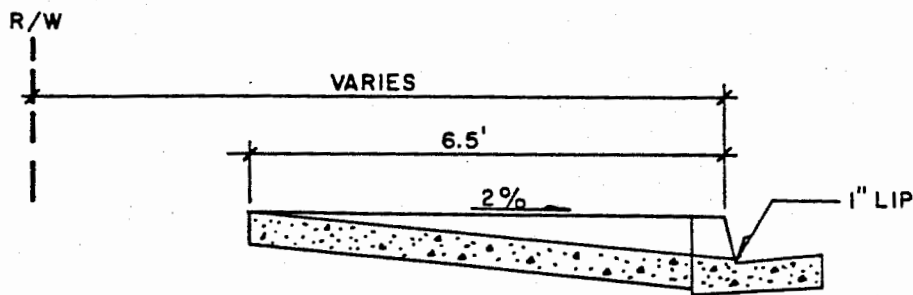

SECTION

NOTES:

1. Driveway Approach Location Shall Be As Indicated In The S.B. Co. Transportation Department Road Planning & Design Manual And Per Standard No.130.
2. To Construct A Depression In Existing Curb And Gutter:
 - a. Saw Cut And Remove For The Necessary Width.
 - b. Remove And Reconstruct To The Nearest Joint.
 - c. Horizontal Saw Cut And Remove Curb As Necessary.
3. An Approach Must Be Constructed With Each Curb Depression.
4. Surfacing Shall Be Portland Cement Concrete Class 'B' (5 Sack) 4" Thick And Have A Broom Finish.

SAN BERNARDINO COUNTY TRANS. DEPT.

OCT. 1, 1993 v.h.c.

REV. 3/1/94

KEN A. MILLER
Director of Transportation

**RESIDENTIAL DRIVEWAY
APPROACH WITH CURB**

128